

# Service schematics

# Nokia 700

RM-670

## IMPORTANT

This document is intended for use by authorized Nokia service centers only. Please use the document together with other documents such as the Service Manual and Service Bulletins.

## Version information

While every effort has been made to ensure that the document is accurate, some errors may exist. Please always check for the latest published version for this document.


If you find any errors in the document please send email to: [service.manuals@nokia.com](mailto:service.manuals@nokia.com)



1.0 First approved version.




## Contents


Front page	1
Imaging processor, RAPUYAMA, Camera, Display/Touch IF	2
RAPUYAMA, Memory, UI keys, NFC con, NFC flex board, Sensors	3
PEARL, Charging, USB modules	4
PEARL, MMC, AV-connector, Audio	5
LED-driver, UI flex con, UI flex board, Interposer board	6
BTH FM, WLAN, GPS	7
RF part	8
Component finder top	9
Component finder bottom	10
Component finder Flex boards	11

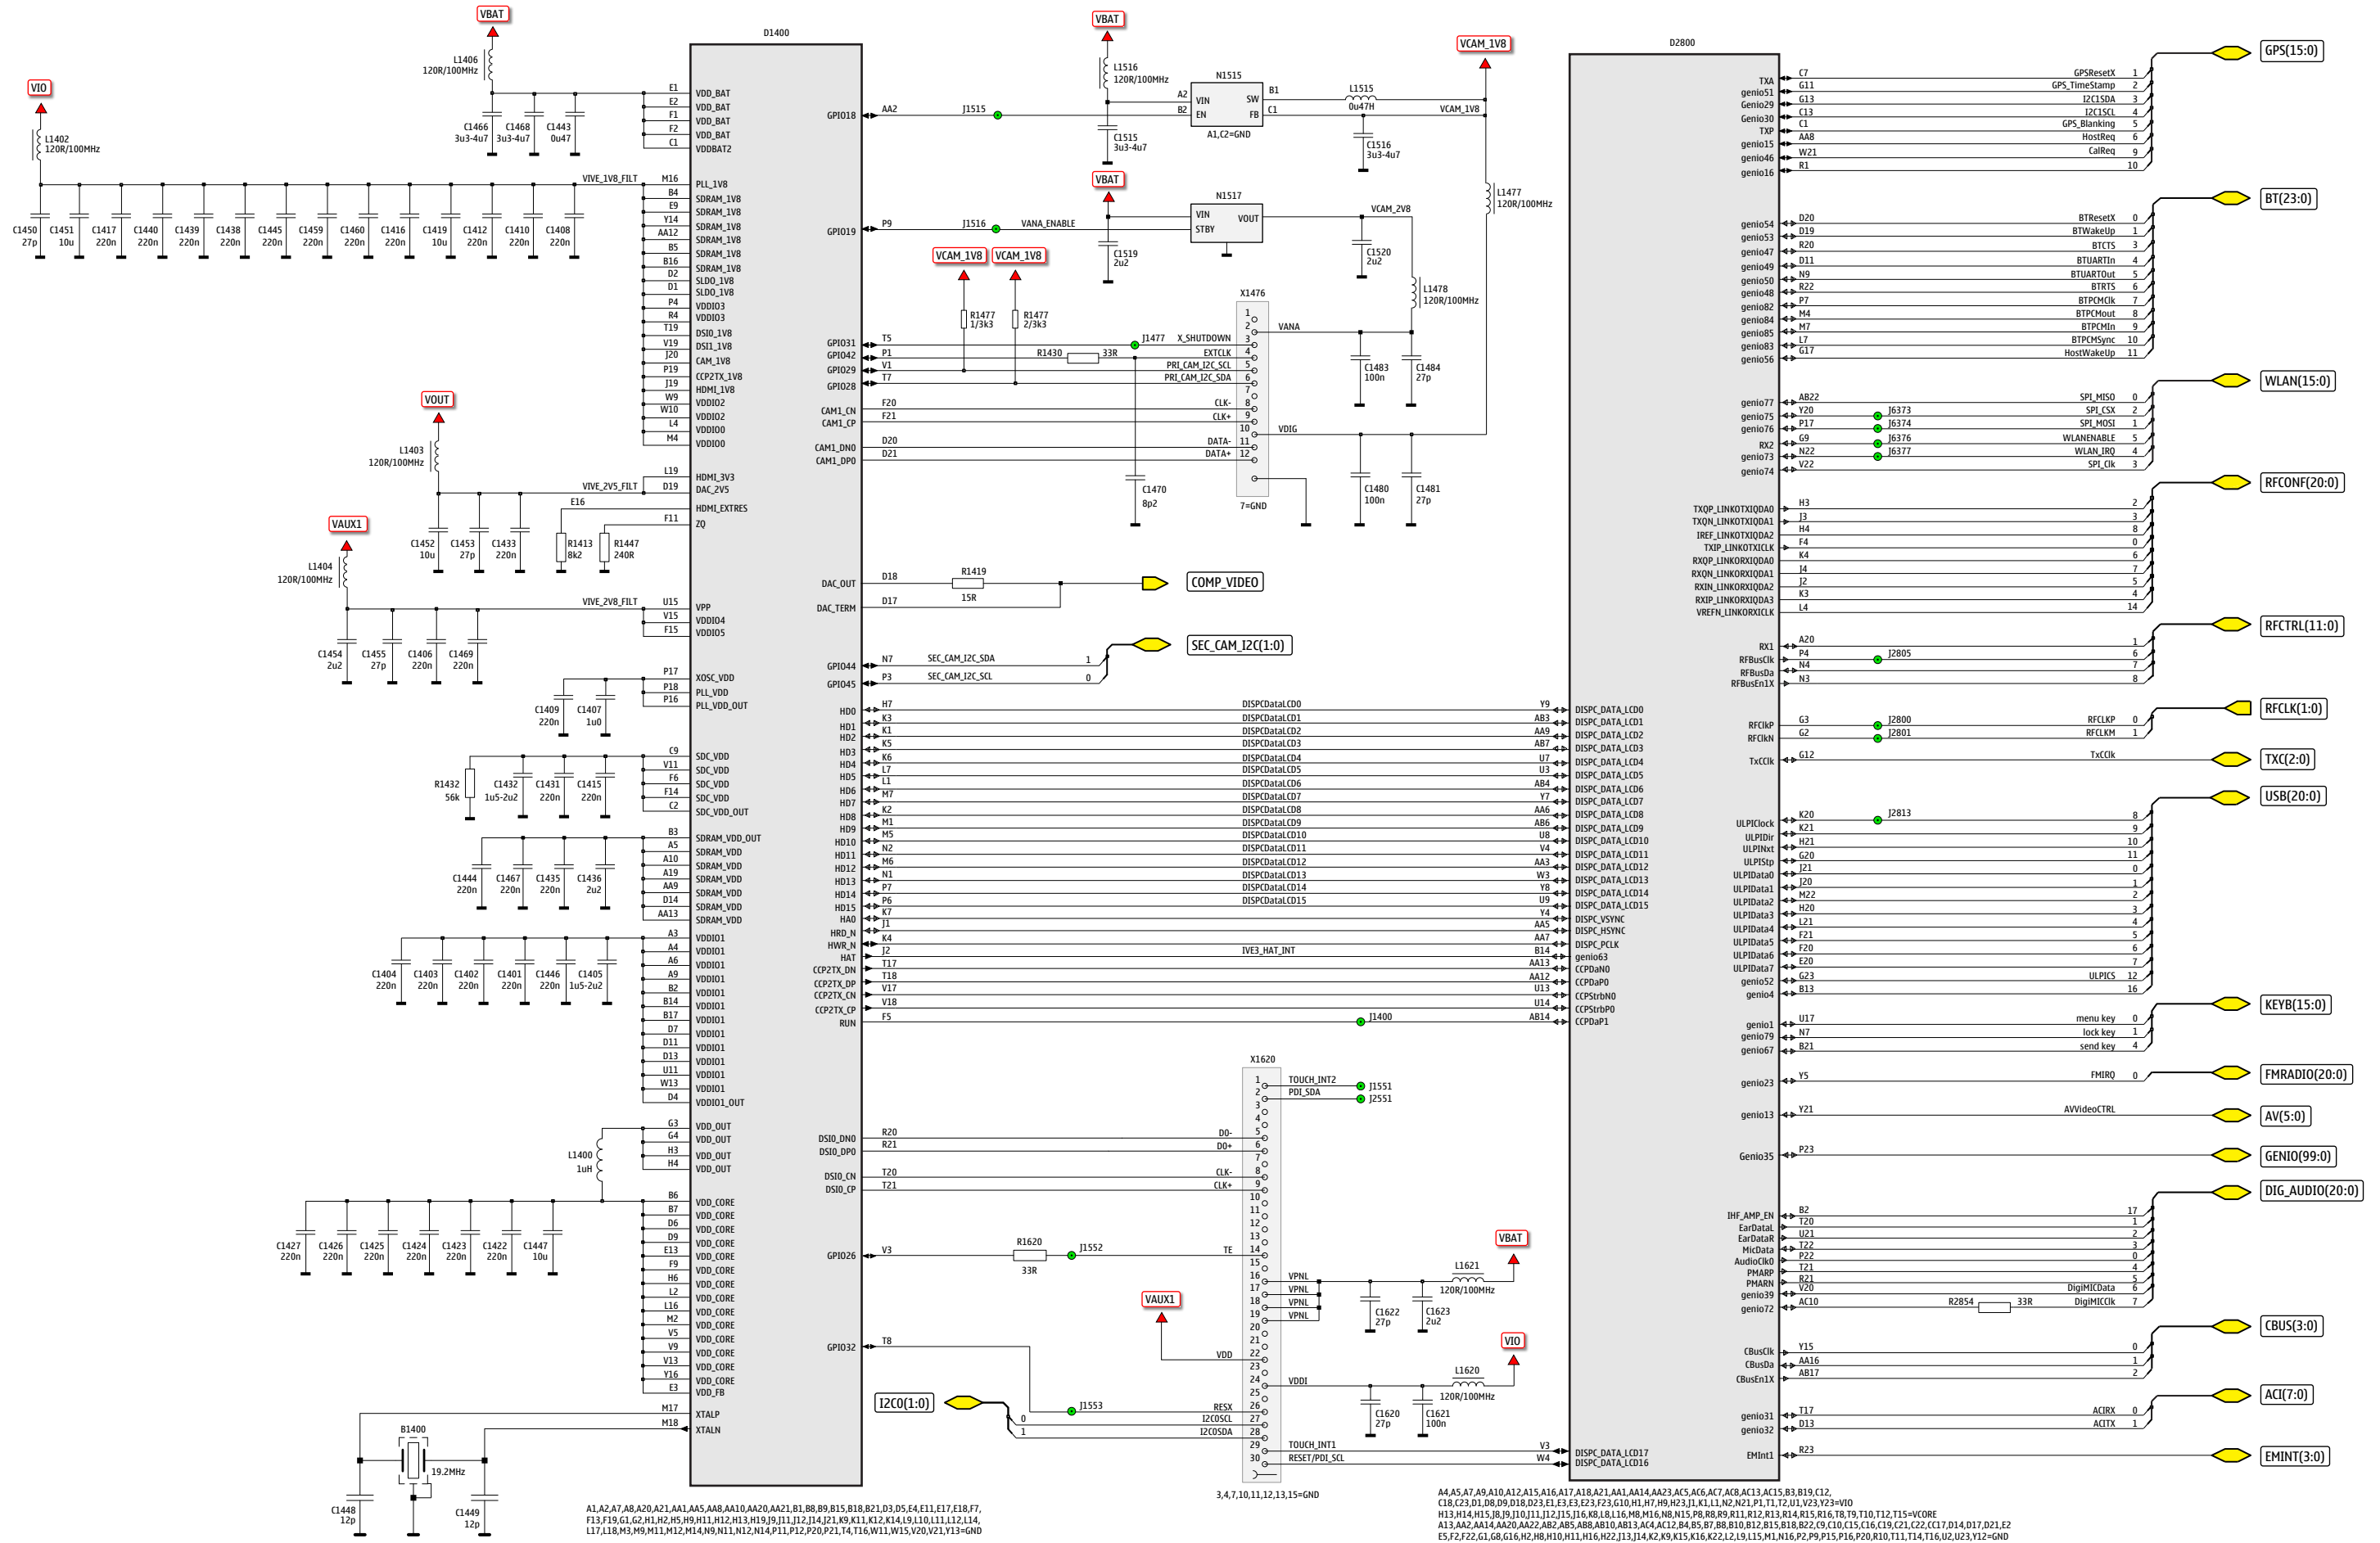

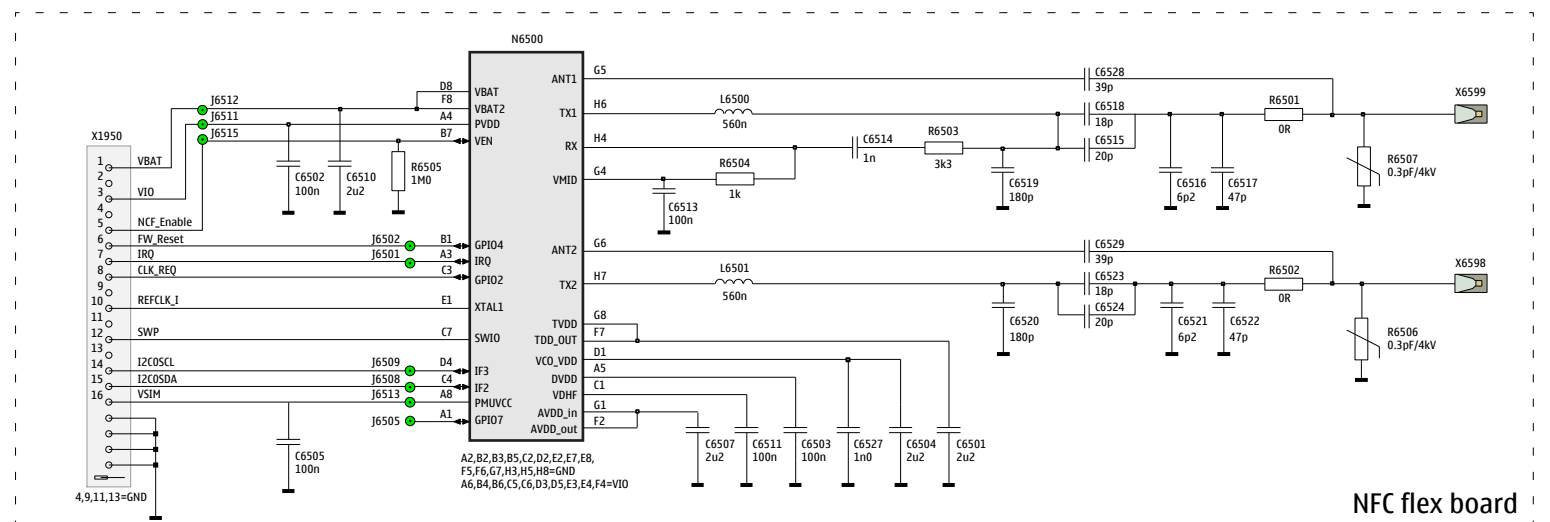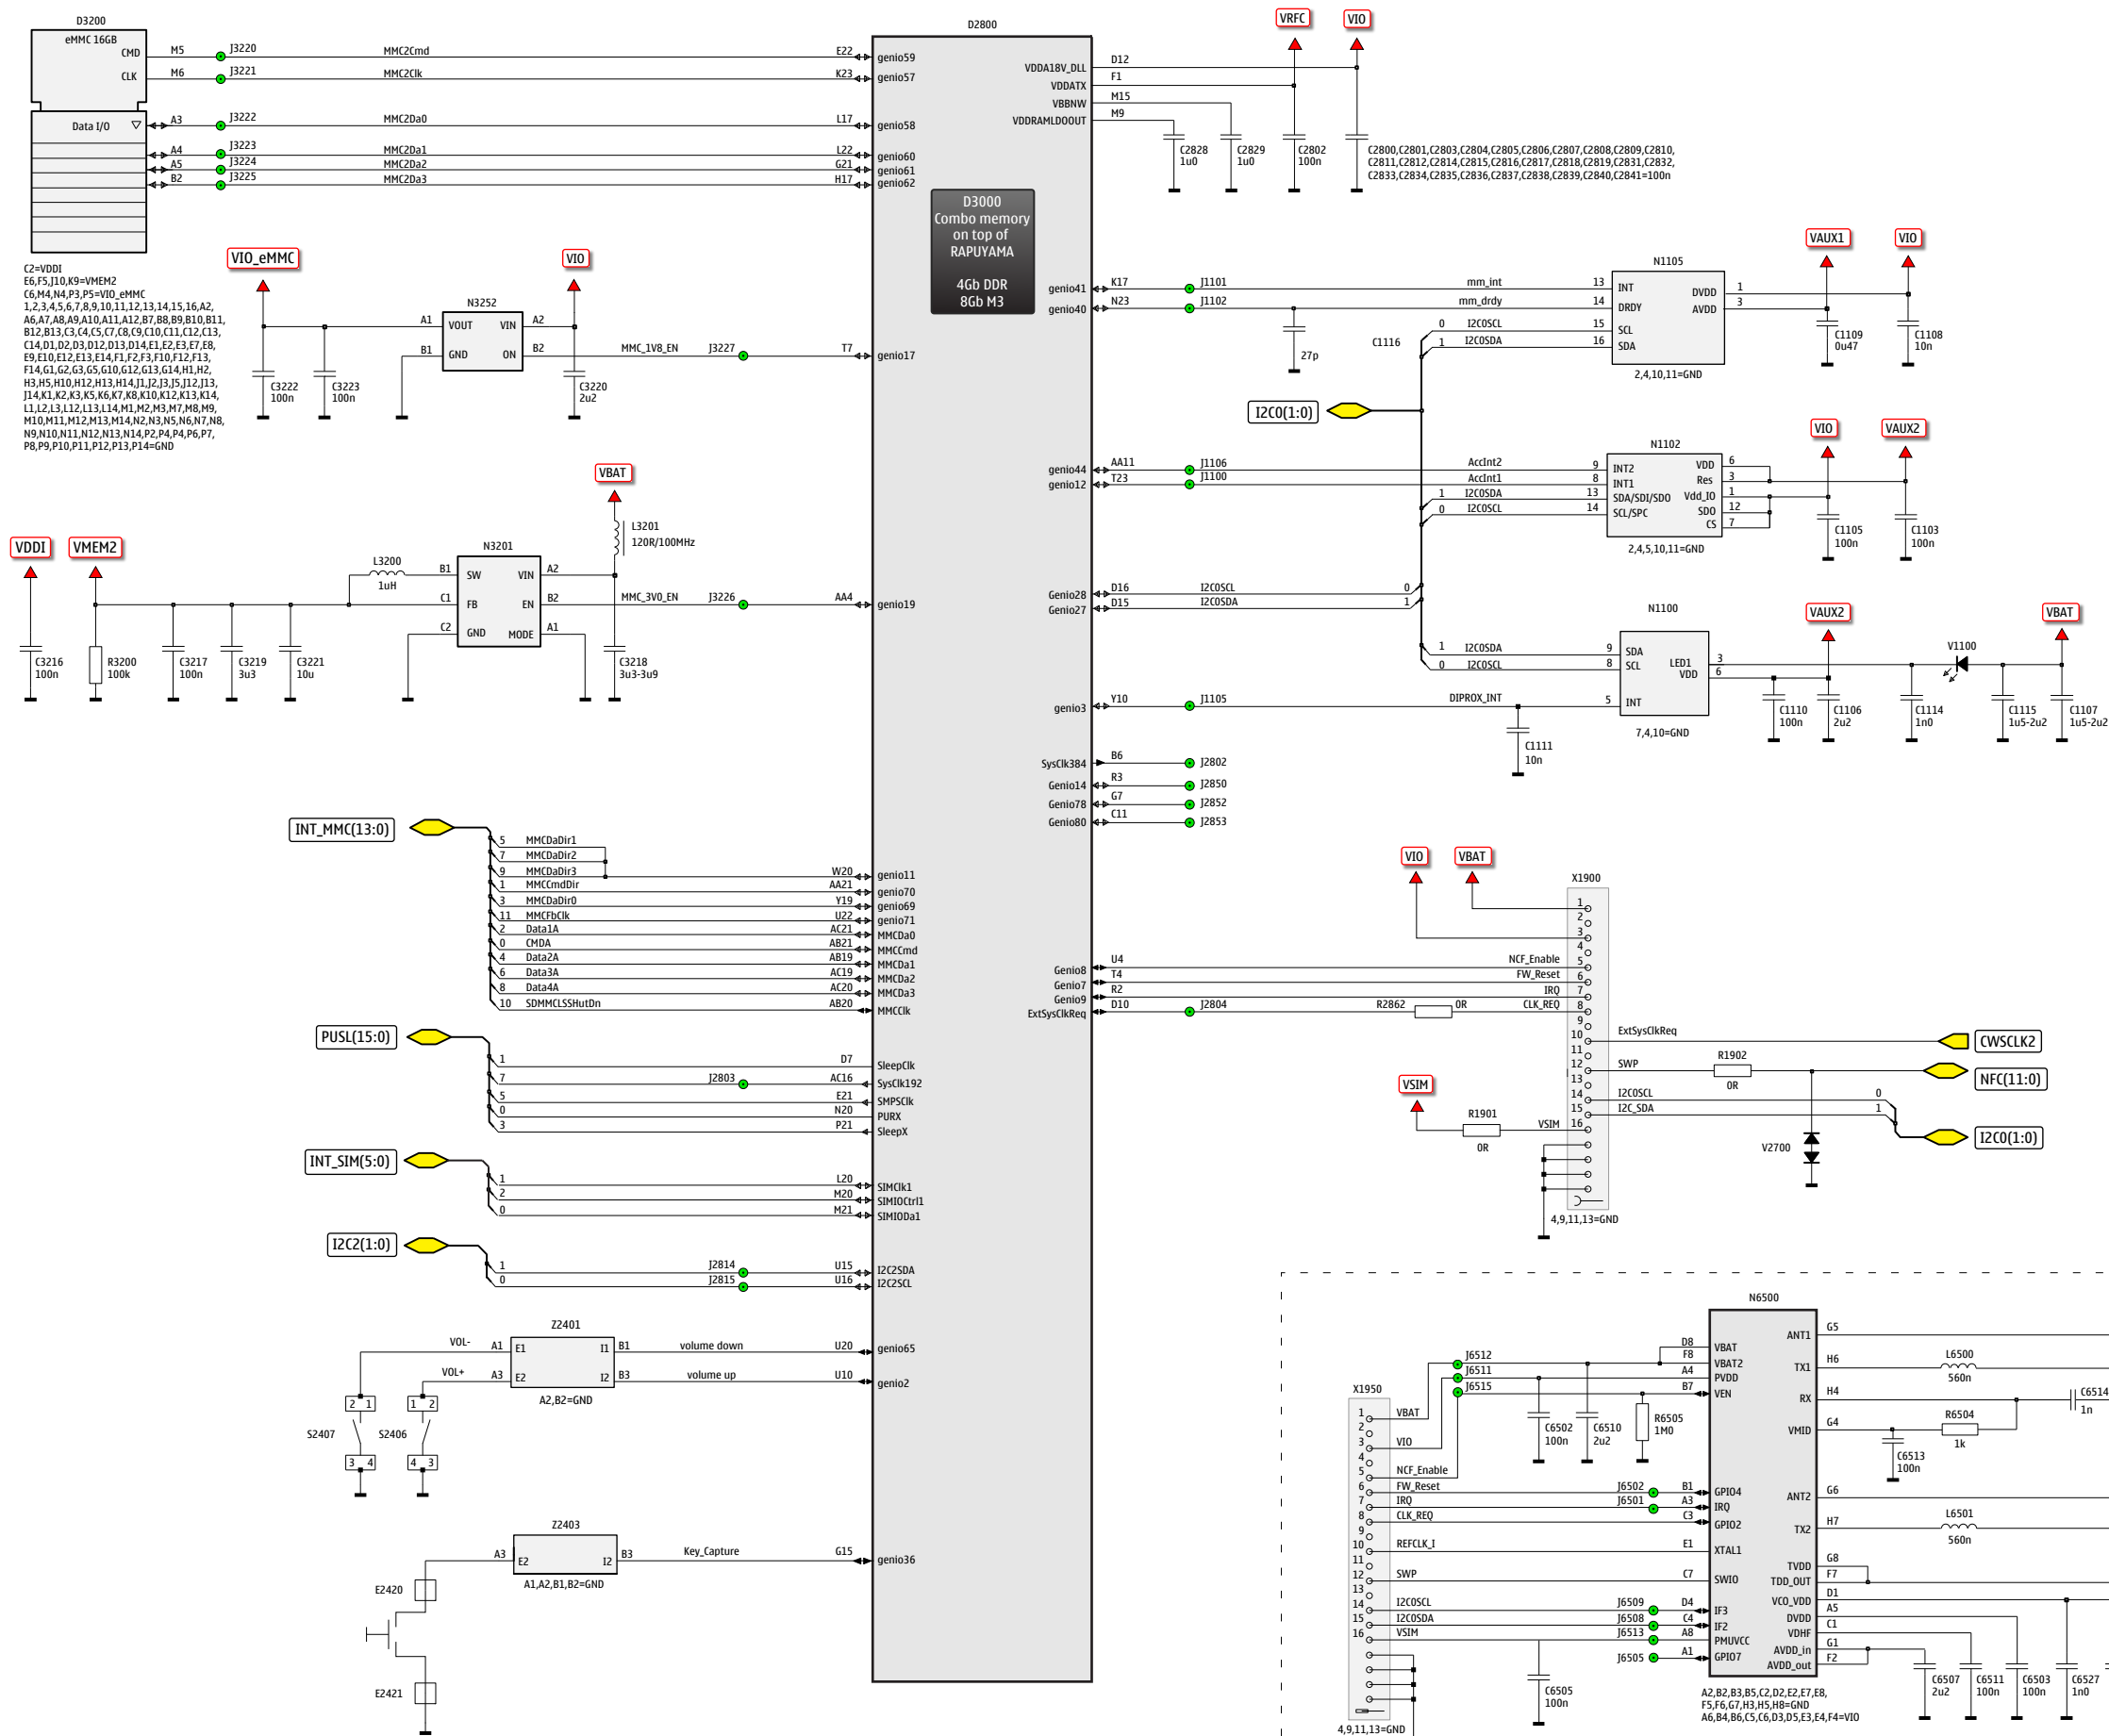

NFC flex board

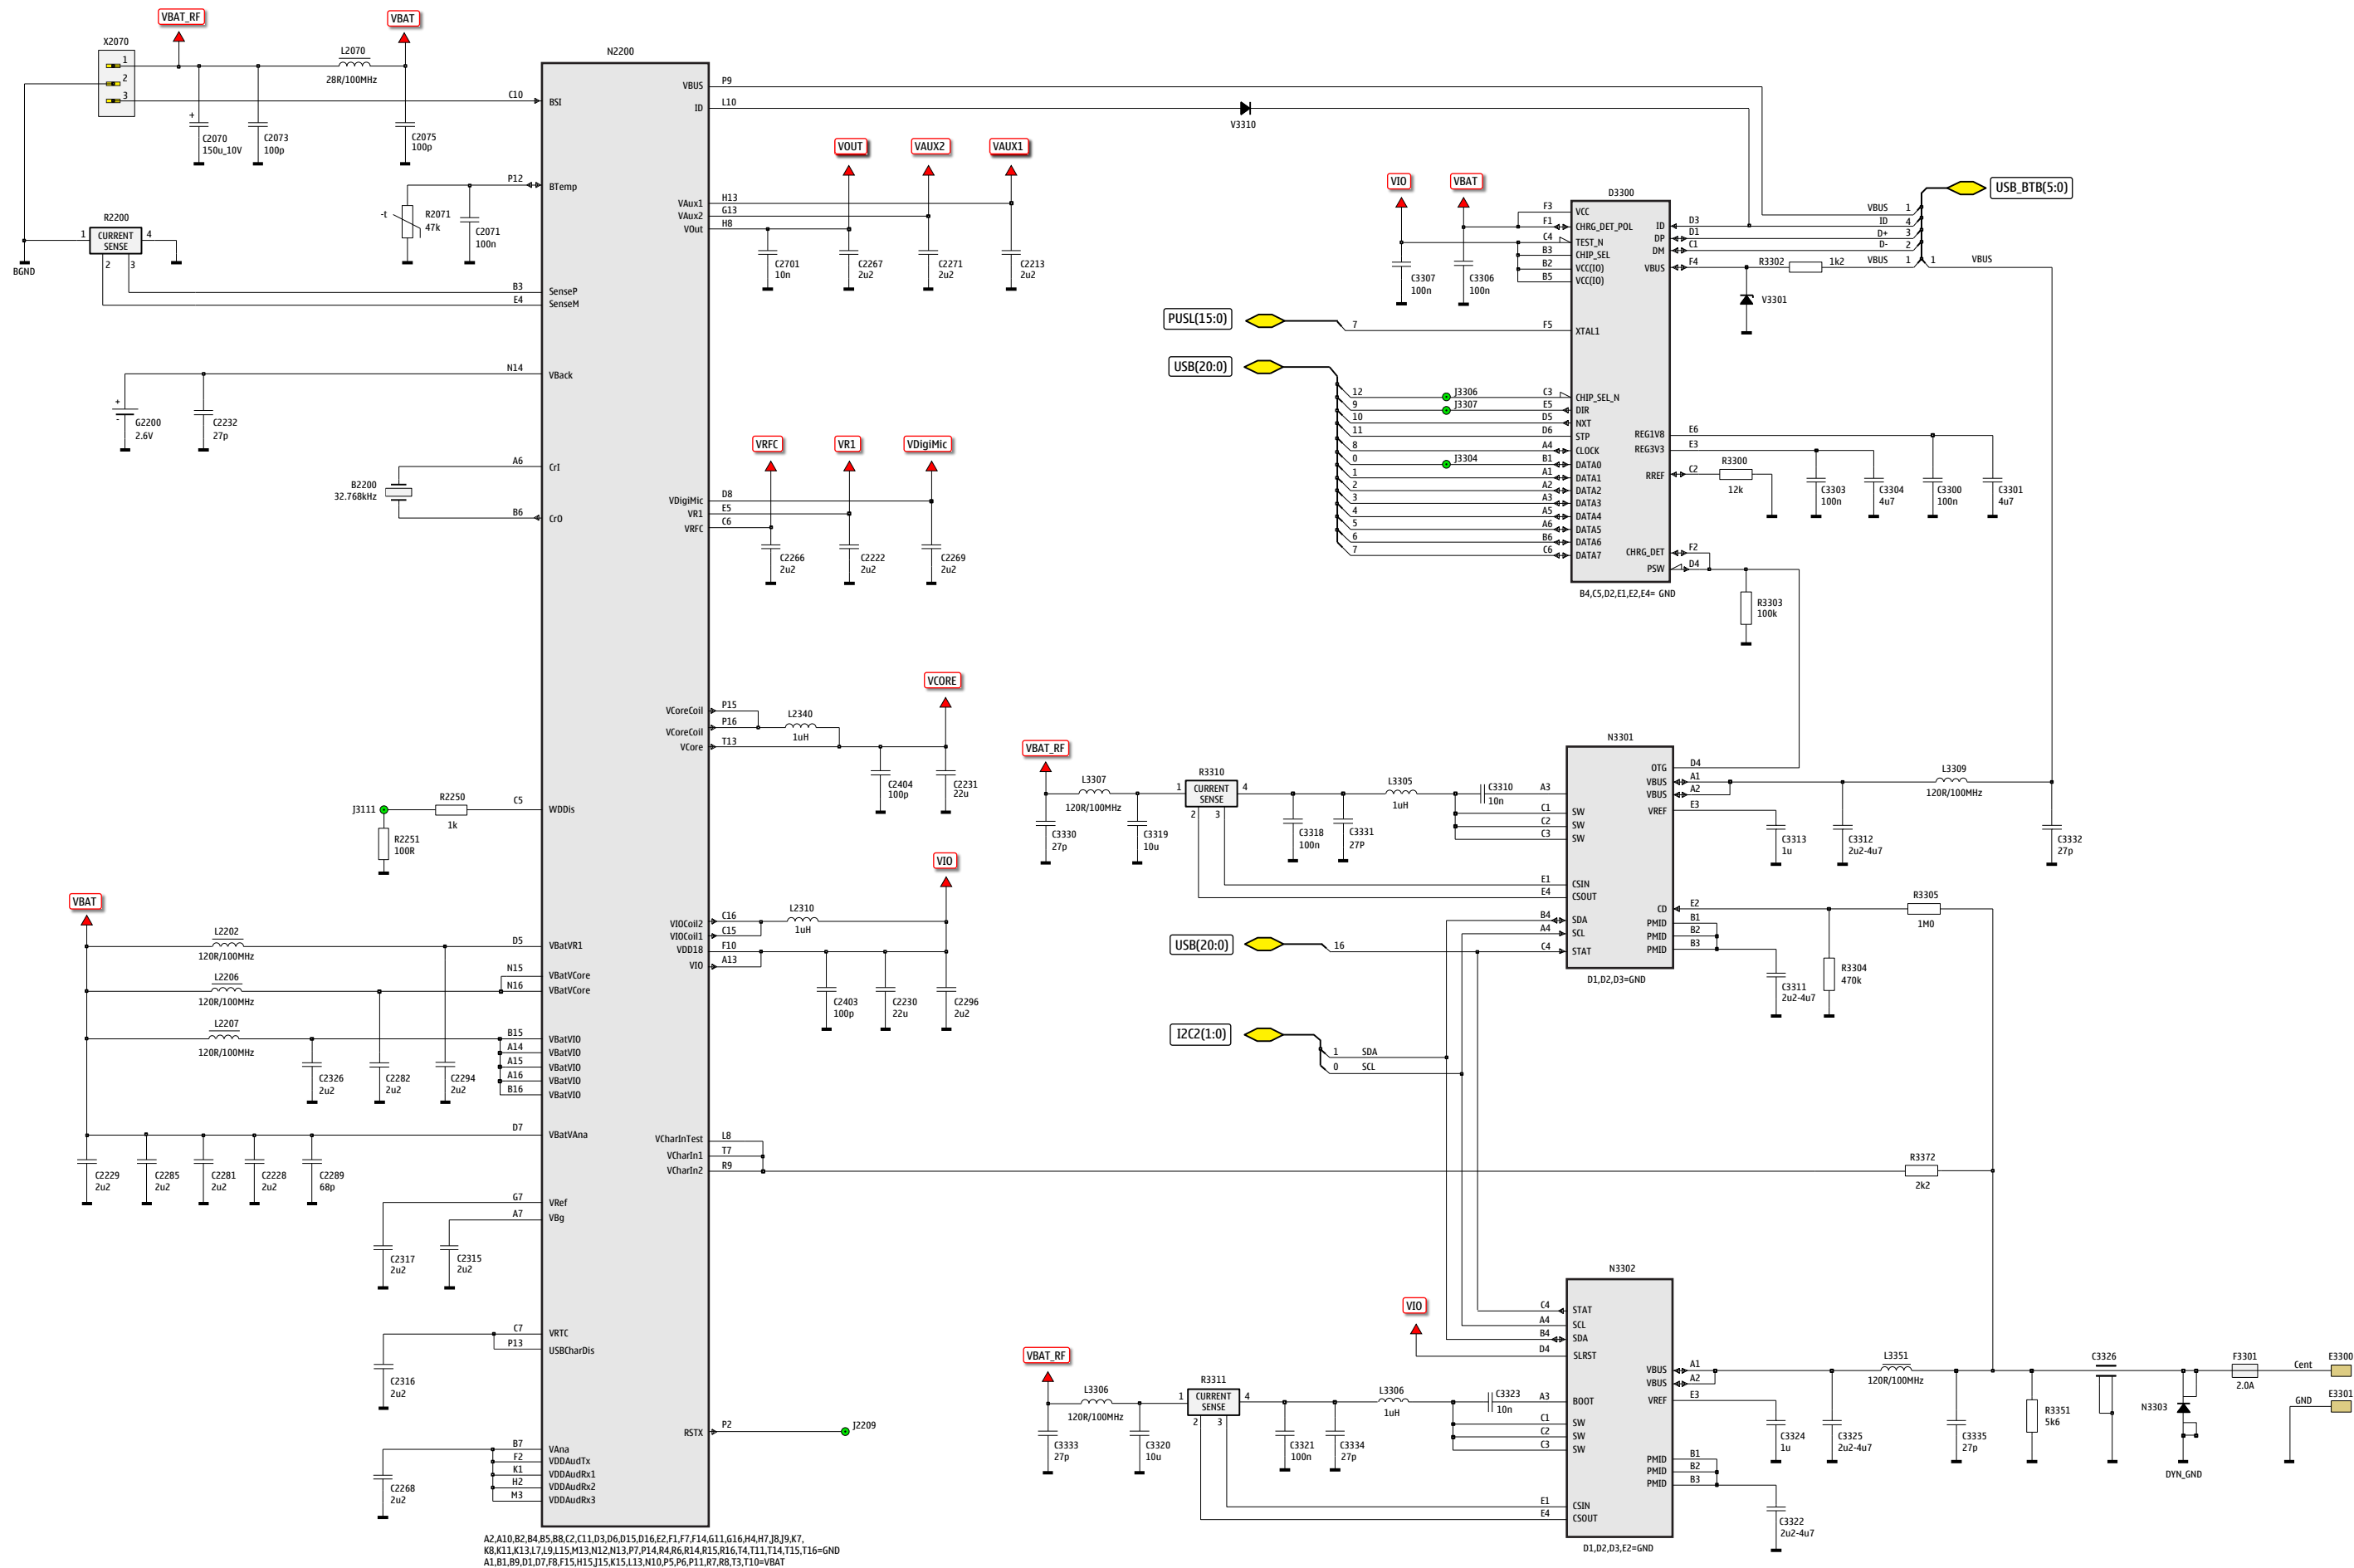


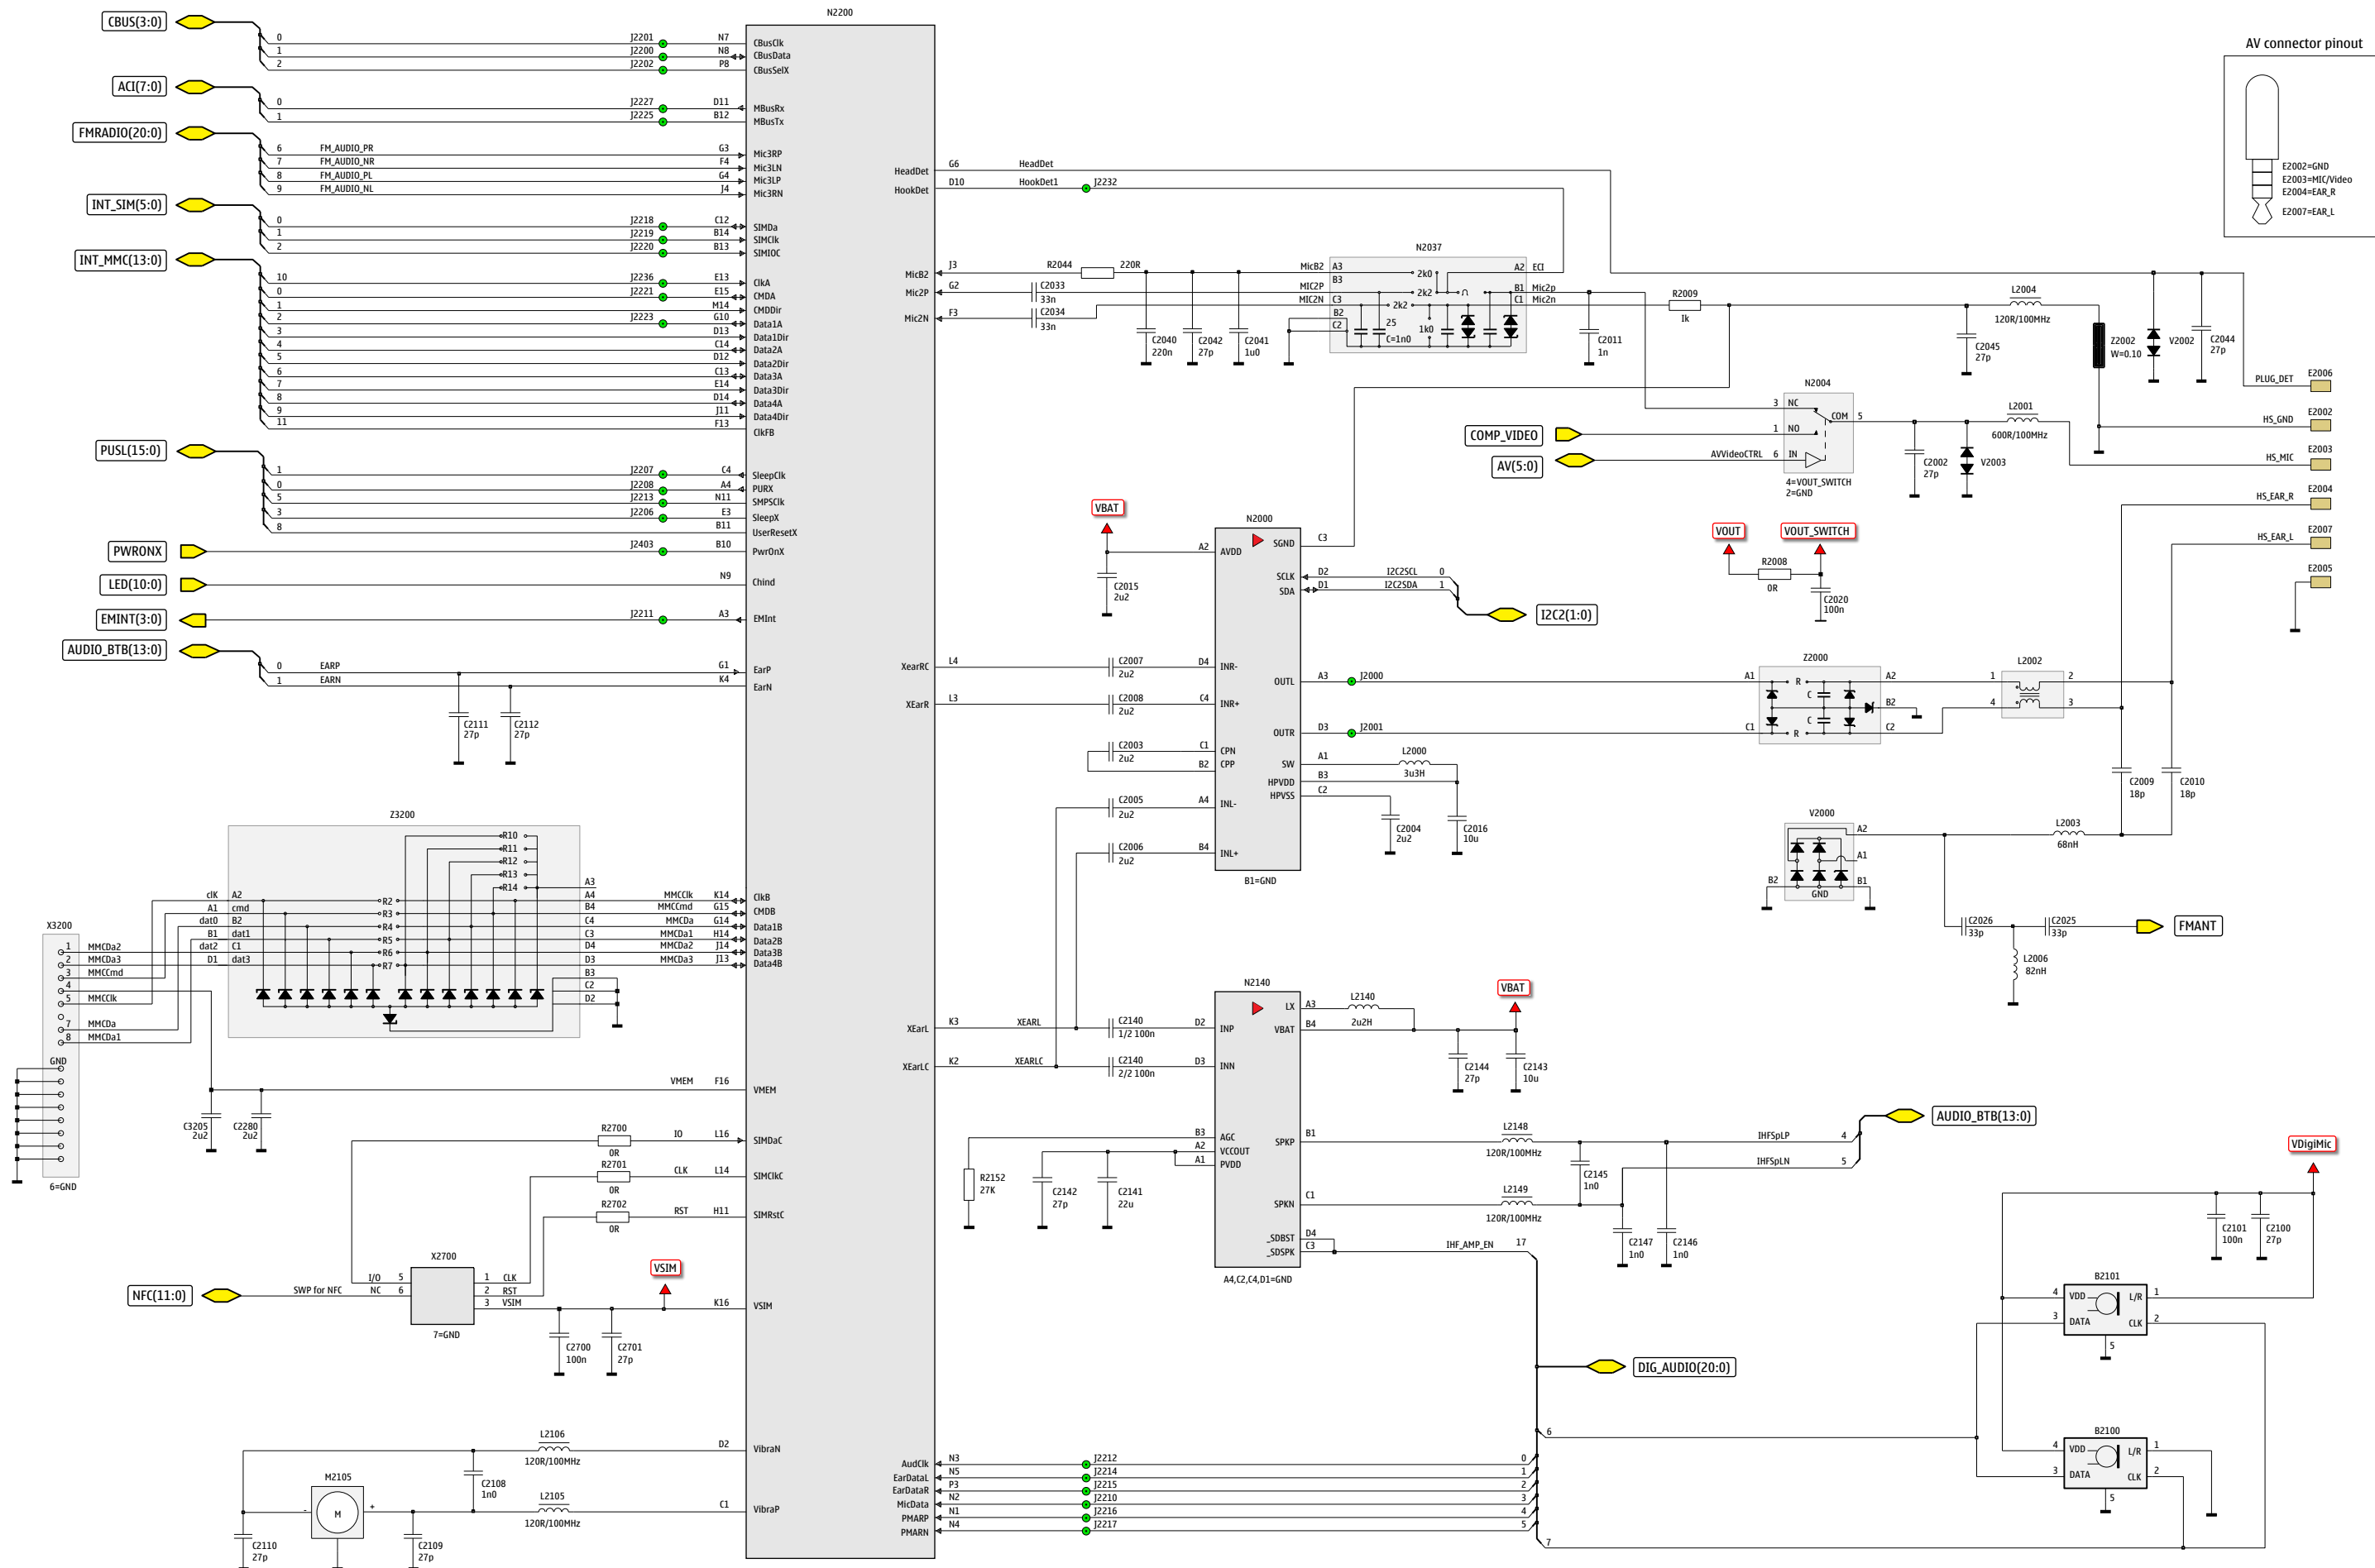












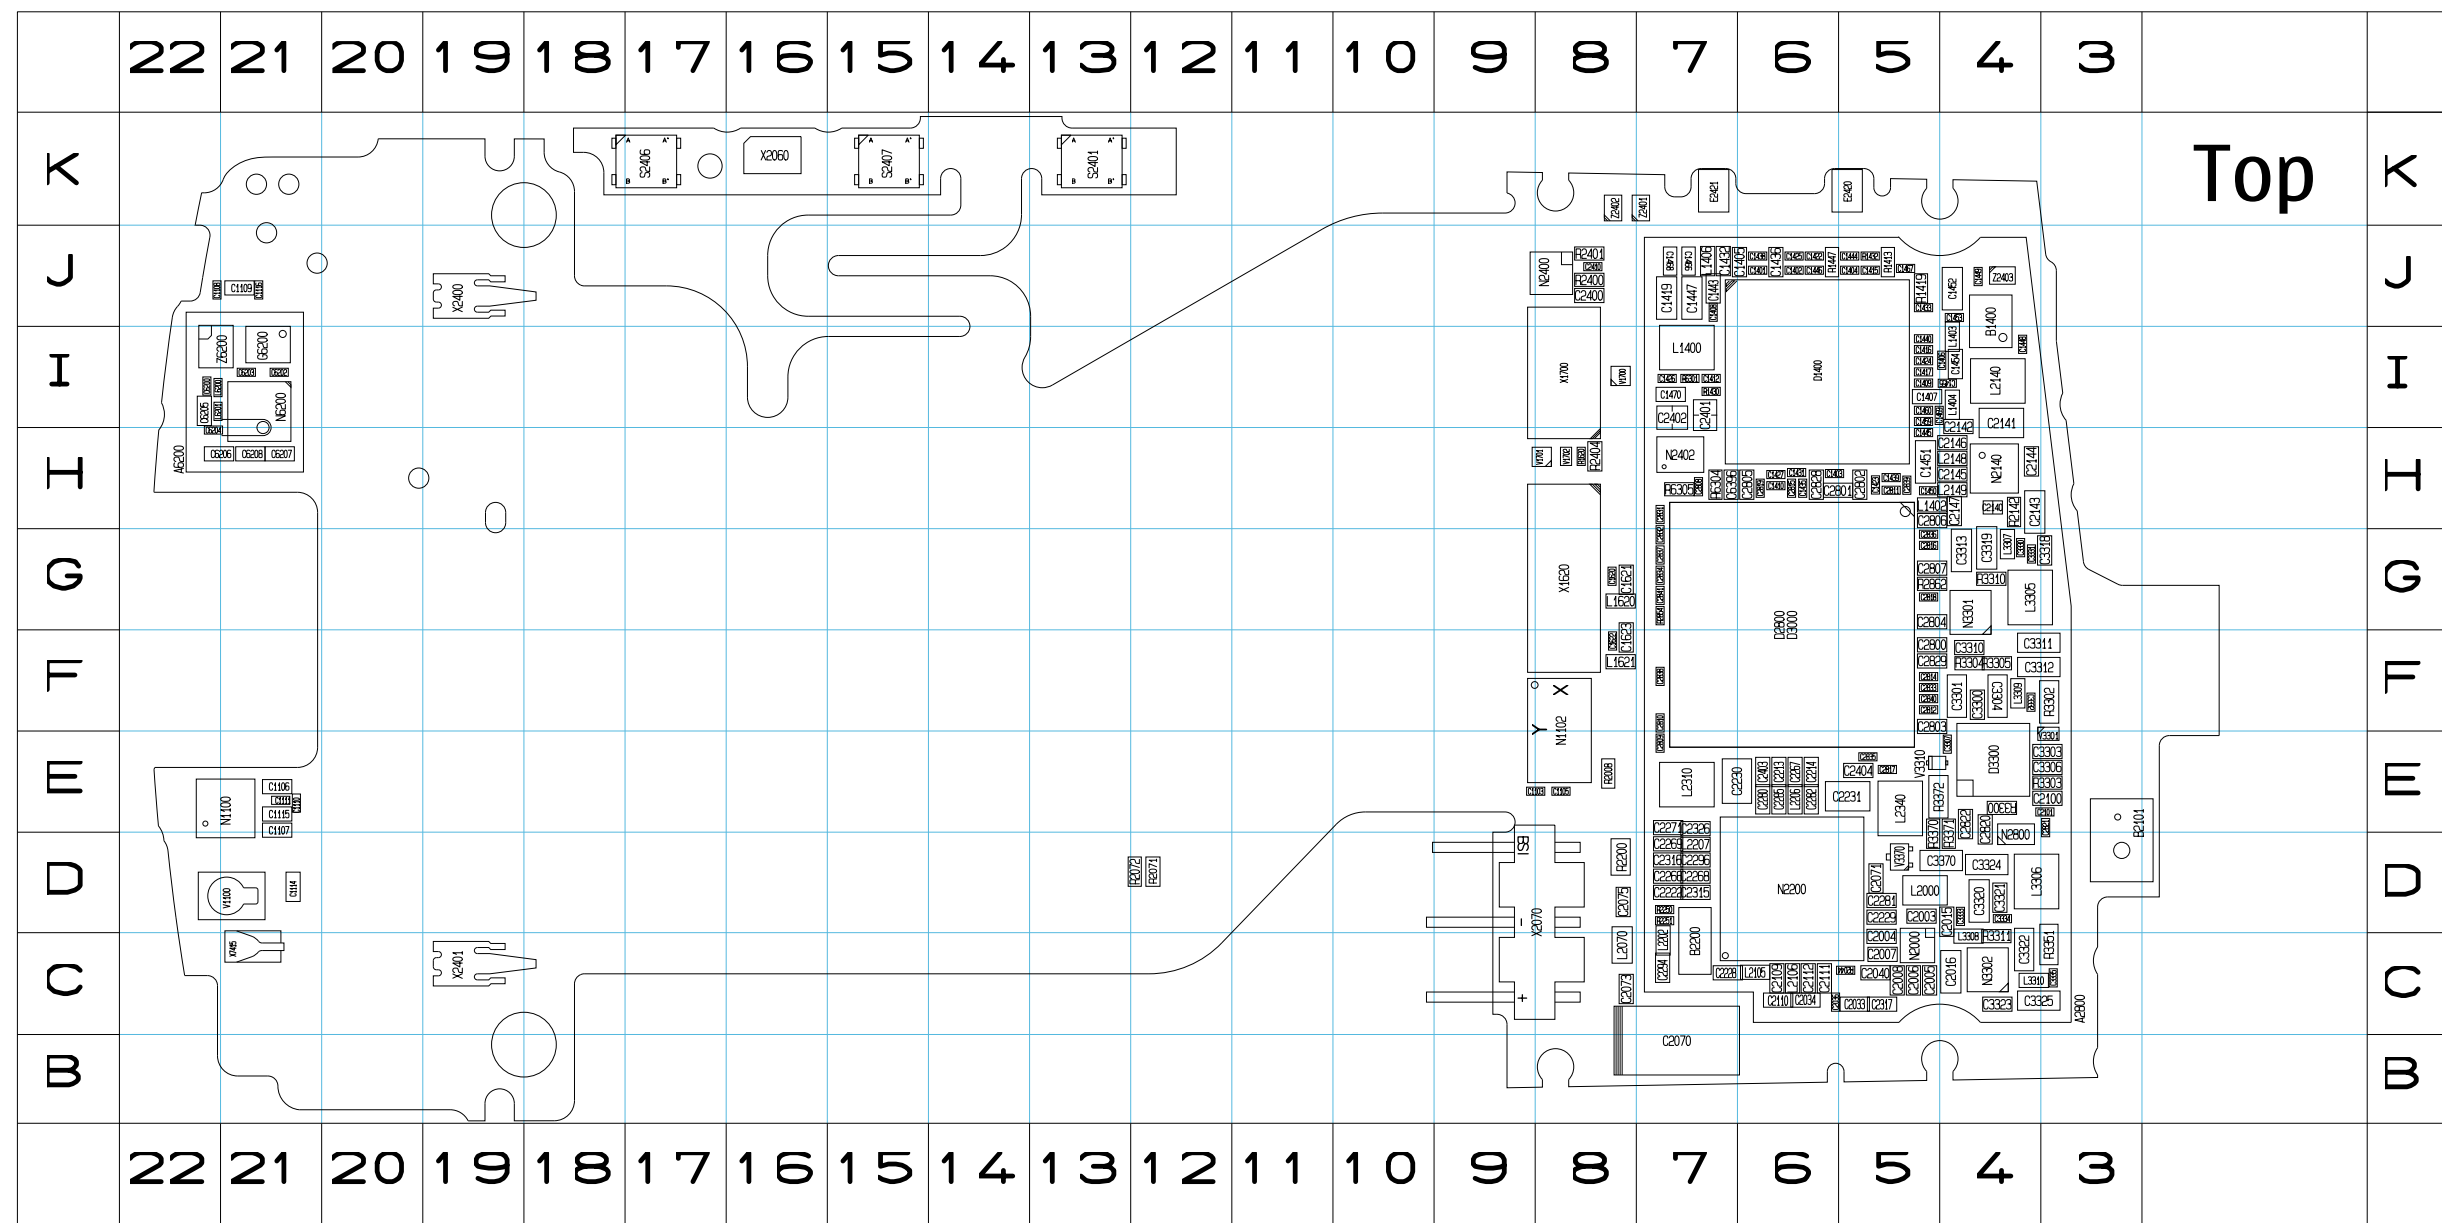

A		C1114	D21	C1417	I5	C1443	J7	C1467	J5	C2033	C5	C2142	I4	C2269	D7	C2404	E5	C2815	H6	C2837	G7	C3319	G4	C6203	I21	G6200	I21	L2202	C7	N2000	C5	R2008	E8	R3304	F4	V1100	D21	Z2401	K7
A2800	G5	C1115	E21	C1419	J7	C1444	J5	C1468	J7	C2034	C6	C2143	H4	C2271	E7	C2410	J8	C2816	G5	C2838	F7	C3320	D4	C6204	H22	L		L2206	E6	N2140	H4	R2044	C5	R3305	F4	V1700	I8	Z2402	K8
A6200	I21	C1116	J21	C1422	J6	C1445	H5	C1469	I5	C2036	C6	C2144	H4	C2280	E6	C2800	F5	C2817	E5	C2839	H5	C3321	D4	C6205	I22	L1400	I7	L2207	D7	N2200	D6	R2071	D12	R3310	G4	V1701	H8	Z2403	J4
B		C1401	J6	C1423	H5	C1446	J6	C1470	I7	C2040	C5	C2145	H4	C2281	D5	C2801	H6	C2818	G5	C2840	F5	C3322	C4	C6206	H22	L1402	H5	L2310	E7	N2400	J8	R2072	D12	R3311	C4	V1702	H8	Z6200	I22
B1400	J4	C1402	J6	C1424	I5	C1447	J7	C1620	G8	C2070	B7	C2146	H4	C2282	E6	C2802	H5	C2819	H6	C2841	G7	C3323	C4	C6207	H21	L1403	I4	L2340	E5	N2402	H7	R2142	H4	R3351	C3	V3301	E3		
B2101	D3	C1403	H6	C1425	J6	C1448	I4	C1621	G8	C2071	D5	C2147	H4	C2285	E6	C2803	F5	C2820	E4	C3300	F4	C3324	D4	C6208	H21	L1404	I4	L3305	G4	N2800	D4	R2200	D8	R3370	D5	V3310	E5		
B2200	C7	C1404	J5	C1426	I7	C1449	J4	C1622	F8	C2073	C8	C2213	E6	C2294	C7	C2804	G5	C2821	E3	C3301	F4	C3325	C4	C6396	H7	L1406	J7	L3306	D4	N3301	G4	R2250	D7	R3371	D4	V3370	D5		
C		C1405	J6	C1427	H6	C1450	H5	C1623	F8	C2075	D8	C2214	E6	C2296	D7	C2805	H6	C2822	E4	C3303	E3	C3330	G4	D		L1620	G8	L3307	G4	N3302	C4	R2251	D7	R3372	E5	X			
C1103	E8	C1406	I4	C1431	H6	C1451	H5	C2003	D5	C2100	E3	C2222	D7	C2315	D7	C2806	H5	C2828	H6	C3304	F4	C3331	G4	D1400	I6	L1621	F8	L3308	C4	N6200	I21	R2400	J8	R6301	I7	X1620	G8		
C1105	E8	C1407	I5	C1432	J7	C1452	J4	C2004	C5	C2101	E3	C2228	C7	C2316	D7	C2807	G5	C2829	F5	C3306	E3	C3332	F4	D2800	G6	L2000	D5	L3309	F4	R		R2401	J8	R6304	H7	X1700	I8		
C1106	E21	C1408	J7	C1433	J5	C1453	J4	C2005	C5	C2109	C6	C2229	D5	C2317	C5	C2808	H7	C2831	H7	C3307	E4	C3333	D4	D3000	G6	L2070	C8	L3310	C4	R1413	J5	R2404	H8	R6305	H7	X2060	K16		
C1107	E21	C1409	I5	C1435	H6	C1454	I4	C2006	C5	C2110	C6	C2230	E7	C2326	E7	C2809	E7	C2832	G7	C3310	F4	C3334	D4	D3300	E4	L2105	C6	L6200	I22	R1419	J5	R2854	G7	S		X2070	D9		
C1108	J22	C1410	H6	C1436	J6	C1455	I4	C2007	C5	C2111	C6	C2231	E5	C2400	J8	C2810	F7	C2833	F5	C3311	F4	C3335	C3	E		L2106	C6	L6201	I22	R1430	I7	R2862	G5	S2401	K13	X2400	J19		
C1109	J21	C1412	I7	C1438	J6	C1459	I5	C2008	C5	C2112	C6	C2266	D7	C2401	I7	C2811	H5	C2834	G7	C3312	F4	C3370	D4	E2420	K5	L2140	I4	N		R1432	J5	R3300	E4	S2406	K17	X2401	C19		
C1110	E21	C1415	J5	C1439	H5	C1460	I5	C2015	D4	C2140	H4	C2267	E6	C2402	I7	C2812	F5	C2835	E5	C3313	G4	C6200	I22	E2421	K7	L2148	H4	N1100	E21	R1447	J6	R3302	F3	S2407	K15	X7415	C21		
C1111	E21	C1416	I5	C1440	I5	C1466	J7	C2016	C4	C2141	I4	C2268	D7	C2403	E6	C2814	F5	C2836	G5	C3318	G3	C6202	I21	G		L2149	H4	N1102	F8	R1620	H8	R3303	E3	V		Z			



